

NOTICE DE MONTAGE

ECOPE DE RADIATEUR ERMAX ADAPTABLES SUR MT 125 2014 → ∞

Durée estimée de montage : 60 min



Le montage des écopes Ermax implique la suppression des clignotants d'origine. Penser à se munir de MINI blinkers.

Kit de fixation

- 1 équerre acier avec insert fileté
- 3 vis BHc 5×15 (grosse tête)
- 2 rondelles plastique Ø5
- 2 agrafes filetées M5
- 2 vis BHc 5×20 (grosse tête)

Montage

- Démontez les écopes et les clignotants d'origine. Déplacer le klaxon et le fixer comme indiqué sur la photo ci-dessous à l'aide de l'équerre et d'une vis 5×15 fournie. Les fils du klaxon doivent passer dans le cadre sous le réservoir.



- Monter les agrafes filetées sur les écopes d'origine comme indiqué sur la photo ci-contre.



- Monter les clignotants (type mini blinkers pour le poids) sur les écopes fournies, et préparer les branchements définitifs. Monter les écopes d'origine sans mettre la vis de fixation inférieure.
- Brancher les clignotants puis fixer les écopes à l'aide de 2 vis 5×15 et 2 rondelles Ø5 au niveau des agrafes montées précédemment. Terminer le montage par les 2 vis 5×20 qui fixent les écopes fournies sur celles d'origine, au niveau de leur point de fixation inférieur.

« ATTENTION »

- * Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'attendre un mois afin d'obtenir une polymérisation complète du vernis.
- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera ni repris ni échangé.
- * Les accessoires Ermax sont conçus pour des montes d'origine. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

FITTING INSTRUCTIONS

ERMAX RADIATOR COVERS ADAPTABLE ON MT 125 2014 → ∞

Estimated fitting time : 60 min




The assembly of the Ermax scoops involves the original indicators' removal.
Think to bring MINI blinkers

Fitting kit

- 1 steel bracket with threaded insert
- 3 screws BHc 5×15 (big head)
- 2 plastic washers Ø5
- 2 threaded fasteners M5
- 2 screws BHc 5×20 (big head)

Fitting instructions

- Remove original radiator covers and indicators. Move and fit the horn with the supplied steel bracket and one screw 5×15 as shown on the picture below. The horn wires must pass through the frame under the tank.

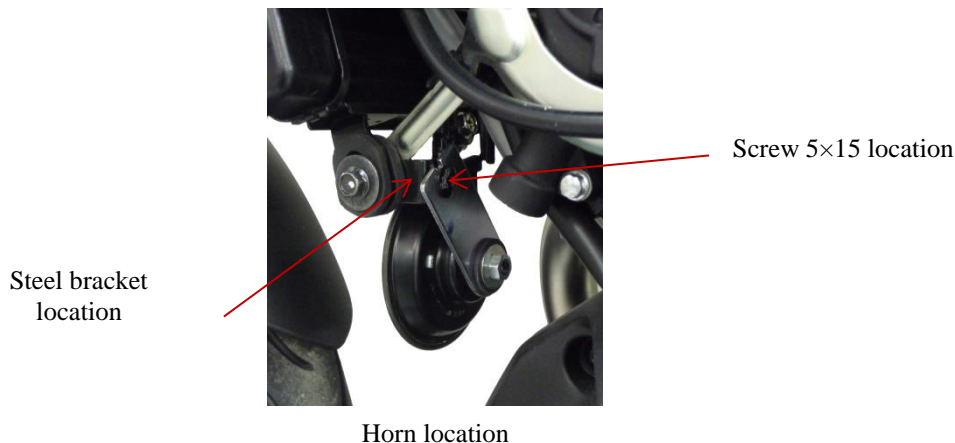

- Place threaded fasteners on the original radiator covers as shown on the picture.



- Fit indicators (mini blinker style for light weight) on the provided scoops, and prepare final connections.
- Connect indicators and then fit the scoops at fastener level (mounted previously) thanks to 2 screws 5×15 and 2 washers Ø5. Complete the mounting with 2 remaining screws 5×20 that set the supplied scoops on the original ones, at their lower fitting point.

« CAUTION »

- * Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, to wait one month to obtain a complete polymerization of varnish.
- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.