

## NOTICE DE MONTAGE

### **PARE-BRISE ERMAX ADAPTABLE SUR SYM MAXSYM 400 2011 → ∞**


*Durée estimée de montage : 20 min*

#### Kit de fixation

- 4 vis BHC Ø5x20 grosse tête noire
- 4 inserts caoutchouc
- 4 vis BHC Ø6x25 petite tête
- 2 rondelles acier Ø6 L
- 2 coques ABS Ermax (droite et gauche)

#### Montage

- Déposer le cache et le pare-brise d'origine.
- Monter les deux coques Ermax à l'aide des vis Ø6x25 sur les points de fixation intérieurs des coques, en insérant la rondelle Ø6 L entre le scooter et la coque Ermax sur le point de fixe supérieur. Surtout bien respecter les côtés droite et gauche (voir photo ci-dessous).
- Mettre les inserts caoutchouc en place sur les coques aux points de fixation extérieurs. Puis monter le pare-brise Ermax avec les vis Ø5x20.

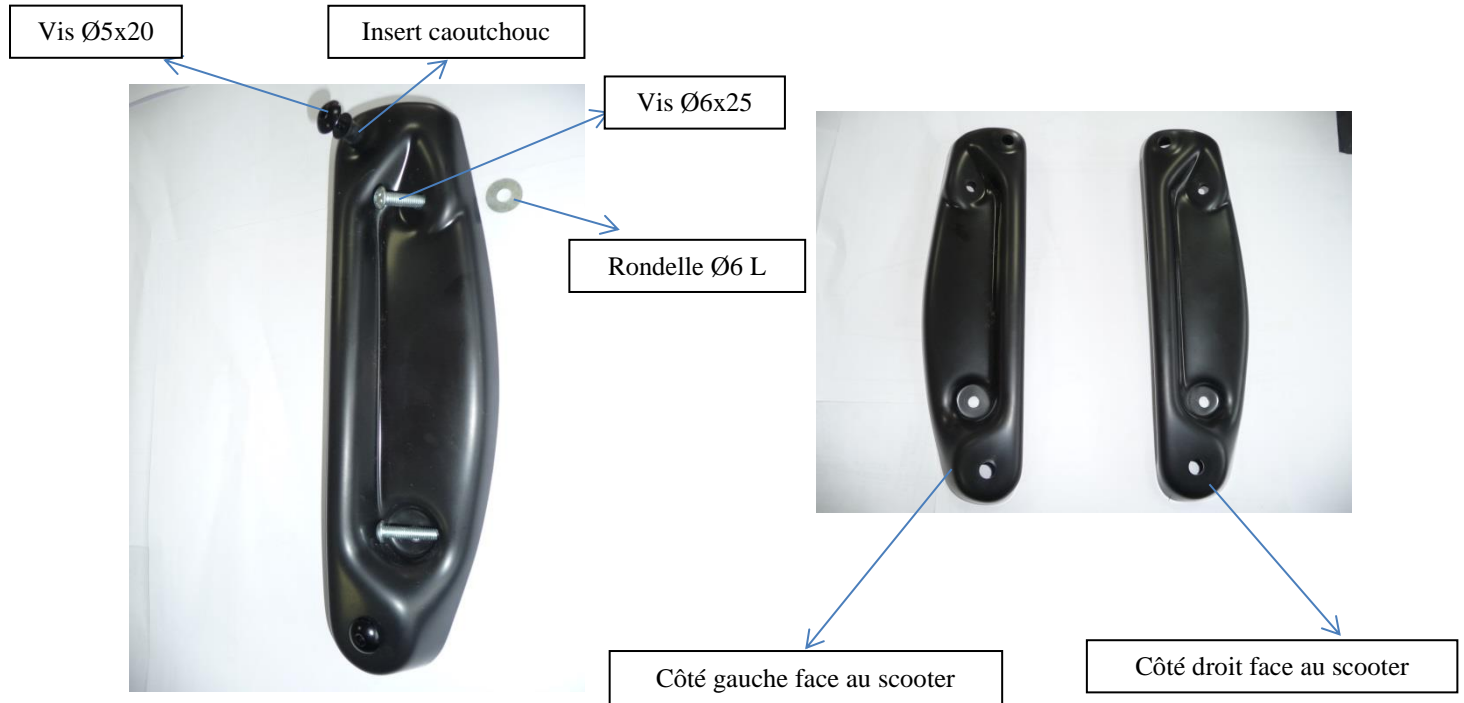

#### « ATTENTION »

- \* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- \* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- \* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- \* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- \* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.
- \* Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.

## FITTING INSTRUCTIONS

### **ERMAX WINDSHIELD ADAPTABLE ON SYM MAXSYM 400 2011 → ∞**


Estimated fitting time : 20 min

#### Fitting kit

- 4 screws BHC Ø5x20 black & big head
- 4 rubber inserts
- 4 screws BHC Ø6x25 small head
- 2 steel washers Ø6 L
- 2 Ermax ABS shells (right and left sides)

#### Fitting instructions

- Remove the cover and the original windshield.
- Fit both Ermax shells thanks to the screws Ø6x25 on the shells' inside fixations, by inserting a washer Ø6 L between the scooter and the Ermax shell on the upper fixation. Take care to respect right and left sides (see the photo below).
- Place the rubber inserts on the shells at the outer fixations. Then place and fit the Ermax windshield thanks to the screws Ø5x20.

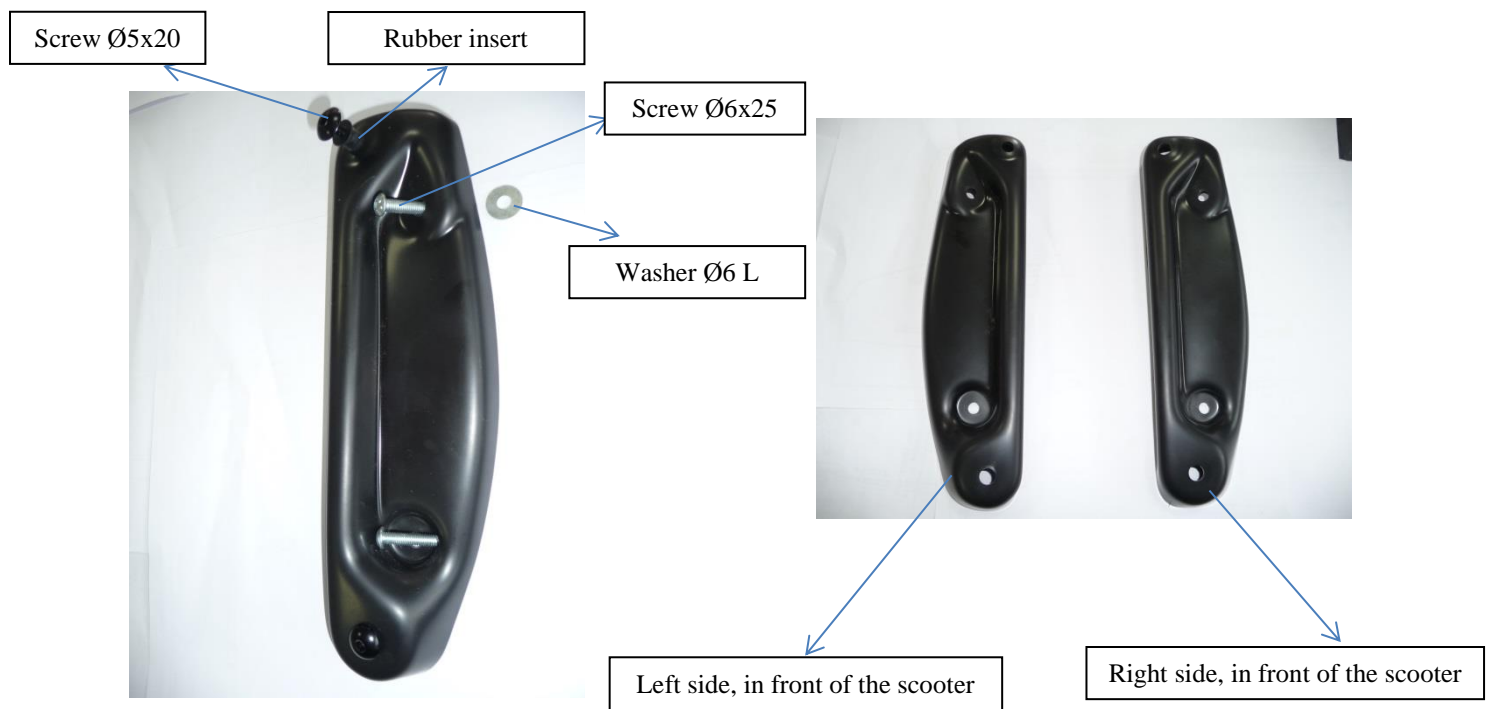

#### « CAUTION »

- \* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- \* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- \* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.
- \* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- \* Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.
- \* Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.